

# Alemlube

## OWNER'S TECHNICAL MANUAL

### Oval Gear Meter

Medium capacity positive displacement flowmeters (15mm, 1/2" meter)

SE-015



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

# Index/Content

## 1. GENERAL

1	Overview	3
2	Operating principal	3
3	Specifications	4

## 2. INSTALLATION

1	Mechanical installation	4
	- Orientation	4
	- Flow conditioning & locations	5
2	Electrical installation	5
	- Instrument cable	5
3	Pulse output selection for pulse meters	6
	- Hall sensor pulse output	6
	- Reed switch sensor pulse output	6
4	Meters fitted with integral instruments	6
	- Meter calibration factor (K-factor or scale actor)	7

## 3. COMMISSIONING

7

## 4. MAINTENANCE

1	Disassembly of pulse meter & exploded view	8
2	Disassembly of meters fitted with an instrument	8
3	Spare parts	9
4	Inspection & exploded view	10
5	Re-assembly of meter	10

## 5. FAULT FINDING

11

1	Trouble shooting	12
---	------------------	----



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

## SECTION 1 - GENERAL

### 1. OVERVIEW

The Oval Gear meter is a precise positive displacement flowmeter incorporating a pair of oval geared rotors. These meters are capable of measuring the flow of a broad range of clean liquids. Stainless Steel flowmeters are suited to most water based products and chemicals and aluminum meters are suitable for fuels, fuel oils & lubricating liquids.

The flowmeter is available as a blind pulse meter with a non-factored pulse output capable of interfacing to most monitoring and control instrumentation or the meter can be fitted with or supplied with instruments such as totalisers, rate totalisers or batch controllers. These instruments also have monitoring and control output options including 4-20mA, scaled pulse, flowrate alarms and batch control logic (preset metering).

If your flowmeter is fitted or supplied with an instrument please also refer to the relevant instrument instruction manual.

#### Manufacturers Declaration

**Simple apparatus** such as Reed switches, Mechanical contact switches, Thermocouples, Resistive sensors & LED's may be employed in a hazardous area without certification provided that the device does not generate or store more than 1.2V, 0.1A, 20 $\mu$ J and 25mW. This IEC definition is also now used in the USA & Canada.

The surface temperature of simple apparatus under normal or fault conditions must not exceed the ignition temperature of the gas, subject to the following very valuable exception.

Because the ability of hot surfaces to cause ignition depends on their size, simple apparatus having a surface area between 20mm<sup>2</sup> and 100mm<sup>2</sup> will be classified T4 when the matched output power of the interface device does not exceed 1.3W into 40°C ambient, 1.2W into 60°C ambient or 1.0W into 80°C ambient.

The 1.3W/40°C element of this European dispensation is now accepted in the USA and Canada. Switches (mechanical & reed switches) and junction boxes dissipate no power and are normally classified T6 (85°C).

**These simple apparatus can be installed freely in I.S. circuits, no certification is required.**




### 2. OPERATING PRINCIPLE

The Oval gear are positive displacement flowmeters where the passage of liquid causes two oval geared rotors to rotate within a precision measuring chamber and with each rotation a fixed volume of liquid is displaced passing through the meter. Magnets embedded within the rotors initiate a high resolution pulse train output. The pulse output can be wired directly to process control and monitoring equipment or can be used as an input to instruments supplied with or fitted directly to the meter.

The benefits of this technology allow precise flow measurement and dispensing of most clean liquids irrespective of their conductivity, with other liquid characteristics having nil or minimal effect on meter performance. This metering technology does not require flow profile conditioning as required with alternative flow technologies making the installation relatively compact and low cost.

#### OPERATION

Liquid travels around the crescent shaped chambers created by the rotational movement of the rotors

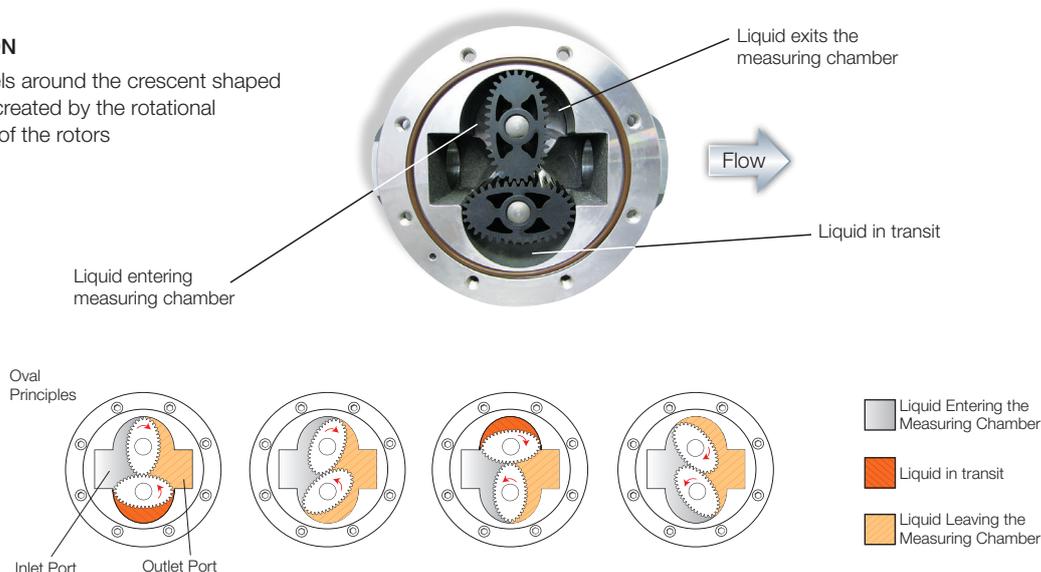

NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008



### 3. SPECIFICATIONS

Model prefix	SE-015
Meter Material type	Aluminium or Stainless Steel
Nominal size (inches)	15mm (1/2")
*Flow range (litres/min)	1 ~ 40
*Flow range (USGM)	0.26 ~ 10.6
Accuracy @ 3cp	± 0.5% of reading ( ± 0.2% with optional RT12 using non linearity correction)
Repeatability	typically ± 0.03%
Temperature range	-20°C ~ +120°C (-4°F ~ +176°F) Max +80°C (+176°F) with meter mount instrument)
Maximum pressure (threaded meters)	10 bar (145 PSI)
Protection class	0.6IP66 / 67 (NEMA4X)
Recommended filtering	150 microns (100 mesh) minimum
<b>Electrical</b> - pulse meters (also see optional outputs )	
Output pulse resolution	pulses/litre (pulses/US gallon) - nominal
Reed switch	84 (318)
Hall effect output (NPN)	168 (636)
Reed switch output	30Vdc x 200mA max. (max. temp. shock 10°C (50°F)/min)
Hall effect output (NPN)	3 wire open collector, 5~24Vdc max., 20mA max.
<b>Optional functions</b>	
Output pulse resolution	pulses/litre (pulses/US gallon) - nominal
Display	flow rate, total (accumulative & resettable)
Preset batching	1 & 2 stage high speed batch control
<b>Optional outputs</b>	
Flow	4 ~ 20mA, high & low flow rate alarm
Pulse	scaled pulse (programmable), pulse amplifier

\* Maximum flow on fuels may be maintained for intermittent periods of refuelling.

\* Maximum flow is to be reduced as viscosity increases, max. pressure drop 100Kpa (15psi)

## SECTION 2 - INSTALLATION

### 1. MECHANICAL INSTALLATION (prior to installing the meter check)

- The fluid is compatible with the meter materials of construction using appropriate information such as fluid compatibility charts and site experience.
- Application and process conditions are compatible with the meter specifications. Minimum and max. flows are within the meter specified range including any in-situ cleaning processes. When metering viscous liquids the maximum allowable flow may need to be reduced to ensure the pressure drop across the meter does not exceed 100 kPa (1 Barg, 15 PSIG).
- Process temperature and pressure does not exceed meter ratings.
- The meter is not exposed to process temperatures and pressures that will cause the liquid medium to gasify (flash) within the meter.

### Orientation

The flowmeter **MUST** be mounted so that the rotor shafts are in a horizontal plane. This is achieved by mounting the meter so that the terminal cover or integral instrument display, whichever is fitted, is facing in a horizontal direction. Note the terminal cover or instrument display can be rotated in 90 degree increments to provide access to the electrical entry and to allow the display orientation to suit the installation.



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933


SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

## CORRECT ORIENTATIONS



## INCORRECT

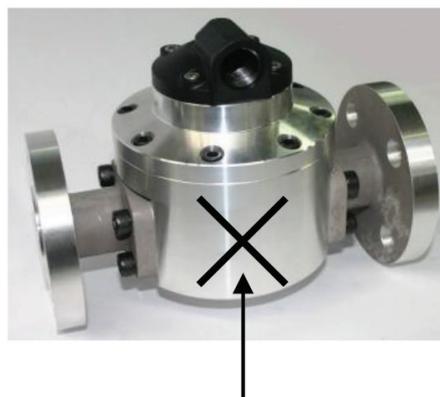

When installed incorrectly the weight of the rotors will bear down on the base of the measuring chamber.

Liquid can flow into the meter from either a horizontal or vertical direction. For vertical flow installations the most common orientation is for the liquid to rise through the meter (*i.e. travel from bottom to top*) to assist in air or entrained gas elimination. The meter operation is independent of the liquid flow direction thus there is no markings for inlet or outlet.

## Flow Conditioning & Locations

**Strainer:** It is recommended to INSTALL a 100mesh (150 micron) strainer immediately upstream of (prior to) the meter. Strainers are available from the factory.

**Flow conditioning:** The flowmeter does not require any flow conditioning, therefore straight pipe runs before or after the meter are not required. If required, the pipe size about the meter can be altered to suit the installation.

**Locations:** The flowmeter is preferred to be fitted upstream of any flow control and/or shut off valve, this prevents free discharge from the meter and minimizes the risk of drainage and air entrapment which can result in erroneous readings or damage the meter on start up.

Process or safety critical meters should be installed in a by-pass section of pipe with isolation valves to enable the meter to be isolated and serviced as required. A by-pass installation also allows purging of the system during commissioning (see *Commissioning*). The meter must be appropriately rated and is typically located downstream (*on the discharge side*) of the pump.

If mounted outdoors ensure a suitable watertight gland or plug is used to seal any open electrical entries. In humid environments take precautions to avoid condensation build up within the electrical and/or instrument enclosure. It is good wiring practice for conduits to be connected from the bottom of an entry port, in this way condensation will gravitate away from any terminal housing.

**Fluid state:** Fluid entering the meter must remain a liquid at all times so protect the meter to avoid solidification or gelling of the metered medium. If meters are to be trace heated or jacketed in any way the maximum temperature rating of the meter must not be exceeded. Size the meter to avoid gasification of volatiles (*flashing*) within the liquid due to the pressure drop experienced within the system or within the meter.

**Hydraulic shock:** If pressure surges or hydraulic shock of any kind is possible, the system upstream of the meter must be fitted with a surge suppressor or pressure relief valve to protect the meter from damage. High frequency flow pulsations can damage the meter. Such pulsations can be caused by the injection profile in diesel engines. Most pulsations are removed with the installation of a suitable pulsation dampener.

## 2. ELECTRICAL INSTALLATION

### Instrument Cable

Twisted pair low capacitance shielded instrument cable 7 x 0.3mm (0.5mm<sup>2</sup>) should be used for electrical connection between the flowmeter and remote instrumentation, use Belden® number 9363 or similar. The cable drain or screen should be terminated on a DC COMMON or a specifically assigned shield termination at the readout instrument end only in order to protect the transmitted signal from mutual inductive interference. **IMPORTANT**, tape off & isolate the shield at the flowmeter end of the cable.

The cable should not be run in a common conduit or parallel with power and high inductive load carrying cables as power surges may induce erroneous noise transients onto the transmitted pulse signal or cause damage to the electronics. Run the cable in separate conduit or with other low energy instrument cables. The maximum transmission distance is typically 1000m (3300 Ft).



NSW

TEL: (02) 9939 0711

FAX: (02) 9939 0411

QLD/PNG

TEL: (07) 3204 9166

FAX: (07) 3204 1224

VIC/TAS

TEL: (03) 8787 8288

FAX: (03) 8787 8266

WA

TEL: (08) 9209 3066

FAX: (08) 9209 3933

SA/NT

TEL: (08) 8241 7111

FAX: (08) 8241 7011

NZ

TEL: (09) 447 1007

FAX: (09) 447 1008

### 3. PULSE OUTPUT SELECTION FOR PULSE METERS


Only Hall effect outputs are available on this meter (open collector from Hall Effect sensors) Output is linearly proportional to volumetric flow and each pulse is representative of an equal volume of liquid.

#### Hall Effect Sensor Pulse Output

The Hall Effect Sensor is a high resolution solid state 3 wire device providing an un-sourced, open collector, NPN transistor output. The term “un-sourced” means that no voltage is applied to the output from within the flowmeter, it must be pulled to a ‘high’ or ‘on’ state by between 5–24Vdc supplied from an external source, typically the receiving instrument.


The pulse output between signal  $\square$  and -0V is a voltage square wave with the high level being the dc voltage available at the open collector  $\square$  and the low level being -0V.

The receiving instrument must incorporate a pull up resistor (*typically greater than 10K ohms in most instruments*) which ties the open collector to the available dc voltage level when the Hall sensor is not energized. When energized the open collector output  $\square$  is pulled to ground through the emitter (-0V).

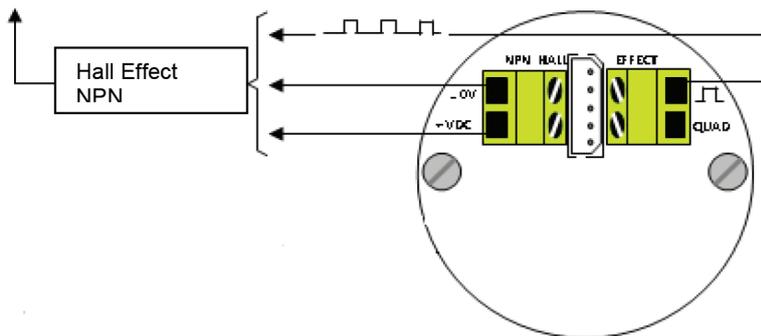

#### Reed Switch Pulse Output

The reed switch output is a two wire normally open SPST voltage free contact ideal for installations without power or for use in hazardous area locations when Intrinsically Safe (I.S.) philosophy is adopted. **Note:** when using the reed switch output the liquid temperature must not change at a rate greater than 10°C per minute (50°F per minute). In general the reed switch life will exceed 2 billion actuations when switching less than 5Vdc @10mA as is the case when combined with the RT, EB or BT instruments.

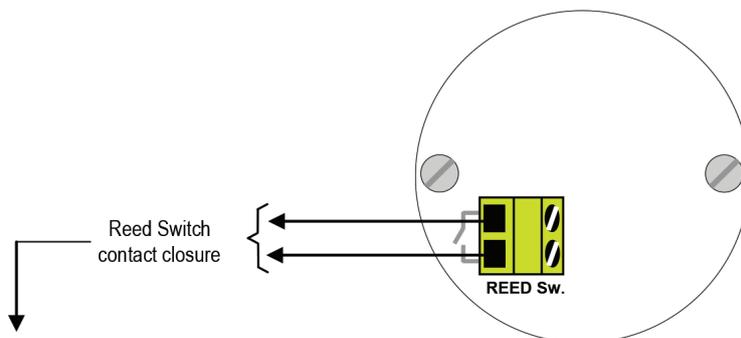

### 4. METERS FITTED WITH INTEGRAL INSTRUMENTS

If your flowmeter is fitted with an integral instrument such as a totaliser, rate totaliser or batch controller then the pulse output from the meter has been factory wired to the flow input of the readout instrument.

Also by default the open collector output from the Hall Sensor is pre-wired and DIP switches set for an integral batch controller allowing high speed, solid state operation of the model EB batch controller.



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008



## SECTION 4 - MAINTENANCE

Adhering to the installation instructions in this manual should ensure your meter provides the required operational performance. These are mechanical meters and a periodic maintenance and inspection regime will maximize the operational availability of the meter.

The frequency of maintenance depends on the application factors including liquid lubricity and abrasiveness and operational factors such as flowrate and temperature.


### BEFORE undertaking meter maintenance ensure the following:

- Associated alarm(s) or control output(s) are isolated so not to affect the process
- Voltage supply is isolated from the meter
- Liquid supply to the meter is closed off
- The meter is depressurized and liquid drained from the meter

### 1. DISASSEMBLY OF PULSE METER *(refer exploded view)*

If required to gain access to the meter terminals and pulse output board, undo the 4 x cap screws (10), remove the terminal cover (9) carefully to avoid putting strain on the terminal connections. The pulse output board (6) can now be accessed and removed if necessary (screws 7).

If required to gain access to the oval geared rotors undo the 4 x body screws (5), carefully pry the meter cover apart from the meter body. Take care to avoid misplacing or damaging the O-ring (3) and rotors (2).

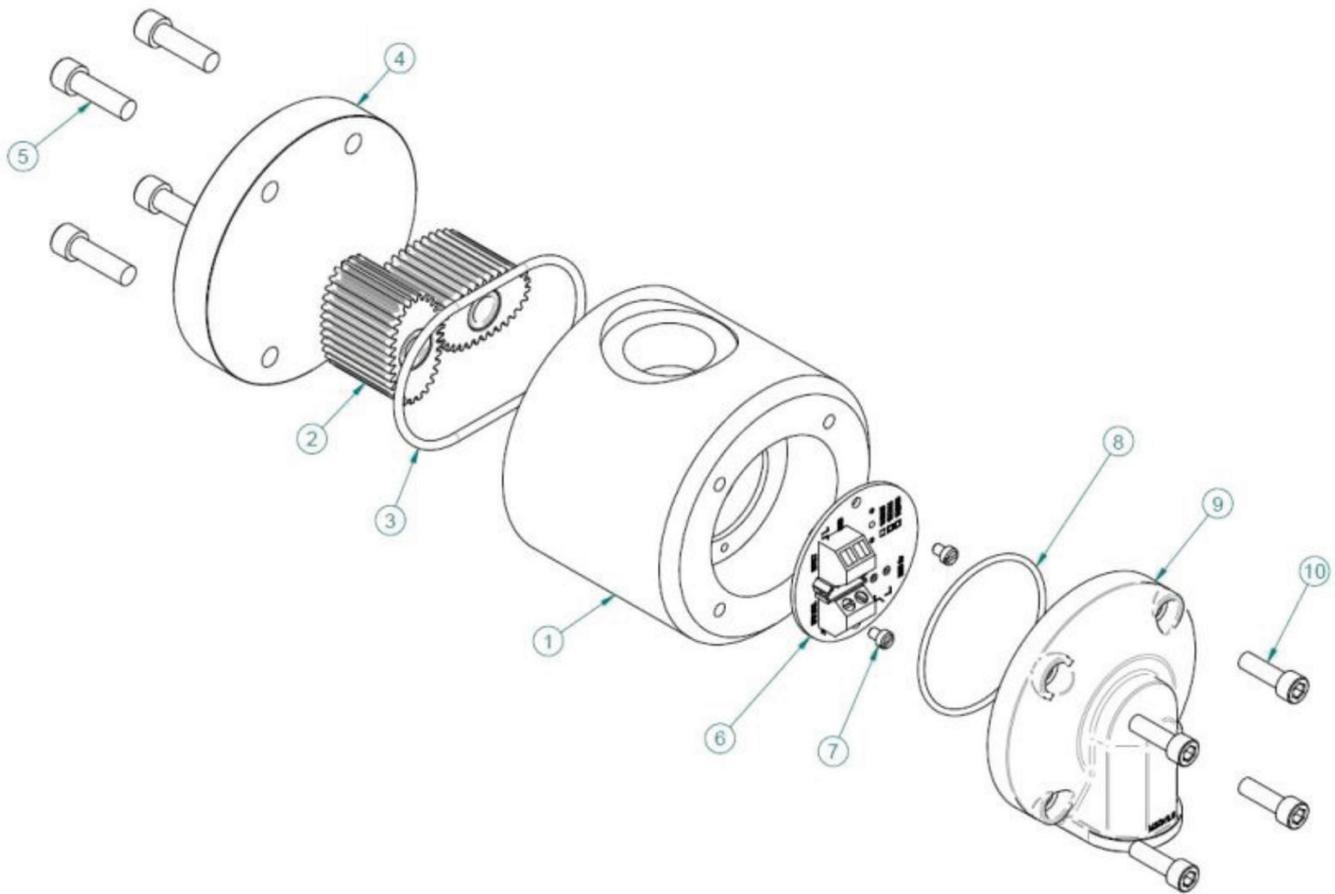

### 2. DISSASSEMBLY OF METERS FITTED WITH AN INSTRUMENT

If the meter is fitted with an integral instrument the instrument display assembly must be removed if required to gain access to the instrument terminal connections, instrument battery or pulse output board. This is achieved by undoing the bezel screws and separating the display assembly from its base. Do not stress or damage the wires that connect the display assembly to the meter output. Take care not to misplace or damage O-ring(s). The pulse output board can now be accessed. To remove the pulse output board, first undo the screws that fix the instrument base to the flowmeter.



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

### 3. SPARE PARTS *(refer exploded view)*

Item	Description	SE-015
1	<b>Body assembly with rotor shafts</b>	<b>Part No.</b>
	Aluminium (NPT)	1401158
	Aluminium (BSP)	1401159
	Stainless Steel (NPT)	1401156
	Stainless Steel (BSP)	1401156
2 <sup>#</sup>	<b>Rotor assembly set</b>	
	Aluminium rotor set	1524021
	Stainless steel rotor set	1524022
	PPS rotor set	1524049
3 <sup>#</sup>	<b>Body O-ring (O-ring size)</b>	
	Viton (standard)	BS142V
	EPR (Ethylene propylene rubber)	BS142E
	Teflon encapsulated Viton	BS142T
	Buna-N (Nitrile)	BS142B
4	<b>Meter cover</b>	
	Aluminium	1306052
	Stainless steel	1306051
5	<b>Body screw (screw size)</b>	
	Stainless steel socket head cap screw	M6 x 20 (4 pcs)
6 <sup>#</sup>	<b>Pulse output board</b>	
	Hall Effect (only)	1412093
	Reed Switch (only)	1412094
7	<b>Output board screw</b>	
	Stainless steel cheese head slotted screw	M3 x 4 (2 pcs)
8	<b>Terminal cover O-ring (O-ring size)</b>	
	Standard GRN Terminal cover (Viton)	BS032V
9	<b>Terminal cover</b>	
	GRN glass re-inforced (M20)	1306012
	GRN glass re-inforced (1 / 2" NPT)	1306018
10	<b>Terminal cover screw</b>	
	Stainless steel socket head cap screw	M5 x 16

<sup>#</sup> Recommended spare parts



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933


SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

#### 4. INSPECTION *(refer exploded view)*

Inspect O-rings for damage, chemical attack, deformity or any form of deterioration.

Remove, inspect and clean the rotors, also check that the magnets have not been chemically attacked. Check the measuring chamber for damage or scoring & redress if necessary, the rotor shafts should NOT be loose or able to be rotated.

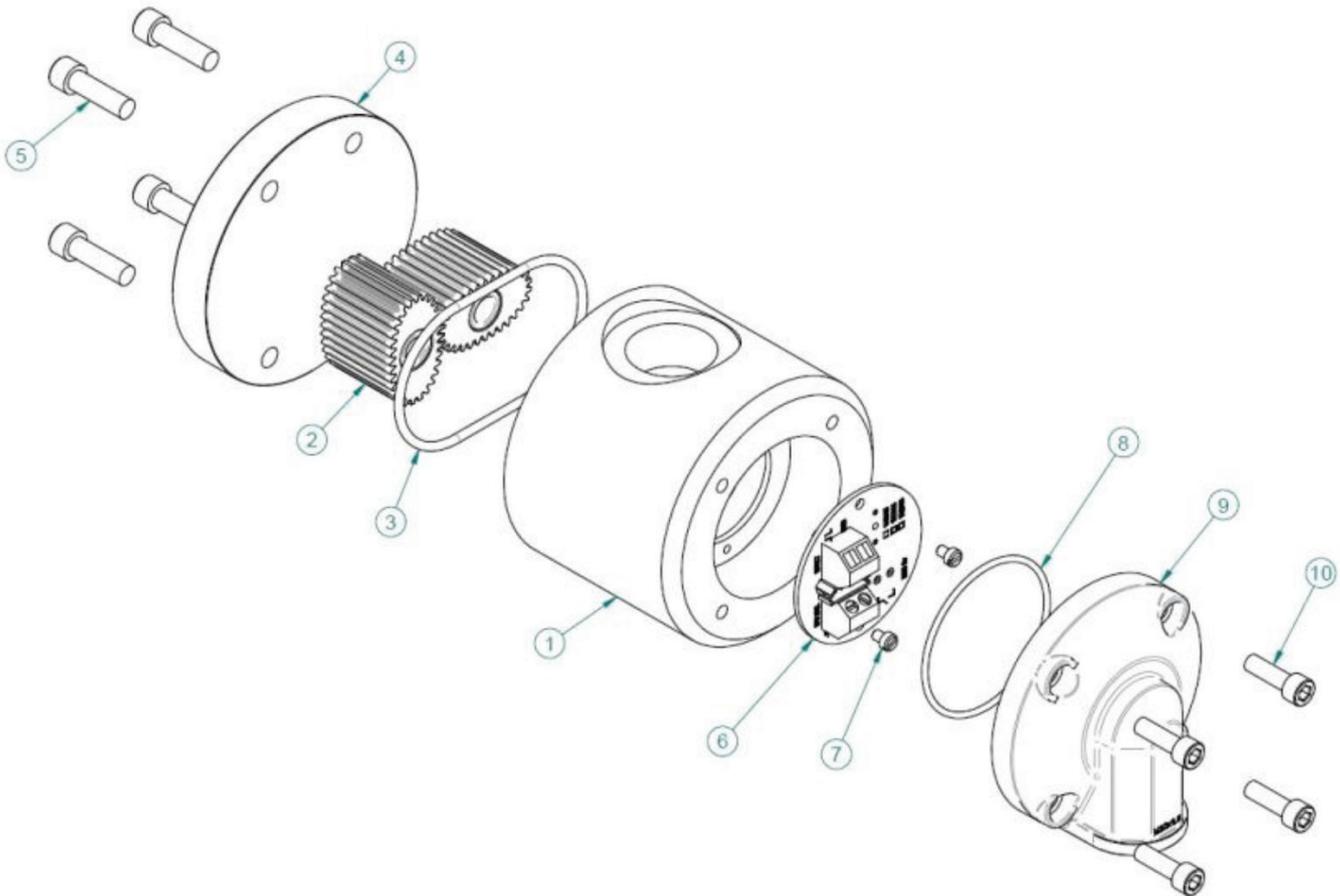

#### 5. RE- ASSEMBLY OF METER *(refer exploded view)*

When re-installing the rotors all four magnets MUST be facing towards the pulse output board when both rotors are in place. Both rotors will only engage correctly if fitted precisely at an orientation of 90 degrees to each other. Rotate the rotors slowly by hand to ensure they are correctly fitted at the same time check the rotor shafts & rotor bearings for wear.

Fit the O-ring into the groove and assemble the two parts of the meter, the body & cap align with a location pin.

Fit the body cover screws (5) and tighten in a star sequence then carryout a final check tighten in the same sequence to a firm torque. This sequence and procedure ensures the meter bodies are assembled correctly and evenly. Fit the pulse output board, terminal cover or instrument as appropriate.



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

## SECTION 5 - FAULT FINDING

**Pulse meters have two distinct sections:** the mechanical wetted section housing the rotors and the electrical section housing the pulse output board.

- Meters fitted with integral instruments have these two sections plus the instrument.
- The aim of fault finding is to trace the source of the fault to one of these sections.
- If a fault is traced to an instrument section, refer to the relevant instruction manual.

Below are basic fault finding steps. Also refer to **Trouble Shooting Guide** on following page.

### Step 1 - Check application, installation and set up

Refer to Mechanical Installation section for installation and application factors that may effect the meter operation including pulsation and air entrainment or incorrect meter selection including incorrect flow rate, temperature and pressure or materials compatibility. Refer to Electrical Installation for correct wiring.

### Step 2 - Check for blockages

The most common cause of fault/unsatisfactory meter operation, particularly for new or altered installations, is due to blockage within the system or meter caused by foreign particles such as weld slag, sealing tape or compound, rust, etc.

### Step 3 - Ensure flow is present

No flow or lower than normal minimum flow may be attributed to a blocked strainer, jammed or damaged rotors within the flowmeter, malfunctioning pump, closed valves or low liquid level in feeder tank.

### Step 4 - Ensure oval gears within meter are rotating.

Rotation of the oval gears can be heard by holding a screw driver blade to the meter body and pressing the handle hard against the ear lobe. If necessary test the meter with the flow turned off and turned on to familiarize yourself with the audible rotation signature.

### Step 5 - Ensure pulses are being generated during flowing conditions.

A multimeter is often not fast enough to distinguish the pulse train from Hall Effect sensor. An oscilloscope will allow you to view the output pulse train. When viewing the Hall effect sensor pulse ensure a pull up resistor is installed between the pulse output and the supply voltage (refer electrical installation).

### Step 6 - Confirm Instrument Operation.

If an associated instrument is connected to the flowmeter confirm its operation by simulating a pulse input onto the flow input terminals. In most instances a contact closure on the flow input terminals is an adequate simulation.



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008

## TROUBLE SHOOTING

Symptom	Possible cause	Solution
Meter readings are high	1. Output signal interference	1. Ground shield of signal cable
		2. Re-route cable from high electrical energy sources.
	2. Entrained air or gas	1. Remove source of air or gas entrapment.
		2. Install an upstream air eliminator
	3. Pulsating flow from reciprocating style pump	1. Increase back pressure on pump
		2. Install a fast response one way check valve
		3. Install a surge arrestor between pump & meter
		4. Re-calibrate meter in situ to compensate for pulsations
		5. Change pump style to smooth delivery type pump
Meter readings are low	1. Damaged or worn rotors	1. Inspect, repair, clean or replace rotors
	2. Damaged or worn measuring chamber	1. Inspect measuring chamber for damage - repair
		2. Check concentricity of rotor shafts within chamber
	3. Output signal interference	1. Ground shield of signal cable
		2. Re-route cable from high electrical energy sources
		3. Check all electrical terminations & wires for continuity
No output from meter	1. Rotors fouled	1. Check that rounded teeth are towards base of chamber
		2. Check for obstruction due to foreign particles
		3. Clean, repair or replace rotors
	2. Meter incorrectly reassembled	1. See instructions for reassembly of meter with particular emphasis on positioning of rotors & magnets
	3. No output from output board	1. Check terminal connections & solder joints
		2. Ensure dc voltage is available at Vdc & 0v and receiving instrument is fitted with a pull up resistor
3. Replace output board		
Not reading on readout instrument	1. Faulty receiving instrument	1. Check DIP switch settings & program data
		2. Check terminal connections & electrical continuity
		3. Repair / replace receiving instrument

### IMPORTANT

**Each meter has been calibrated on mineral oil and will contain a small amount of oil residue. The oil used is Castrol Diesel Calibration Fluid 4113 (product code 055830).**

IM-SE-015-0213



NSW  
TEL: (02) 9939 0711  
FAX: (02) 9939 0411

QLD/PNG  
TEL: (07) 3204 9166  
FAX: (07) 3204 1224

VIC/TAS  
TEL: (03) 8787 8288  
FAX: (03) 8787 8266

WA  
TEL: (08) 9209 3066  
FAX: (08) 9209 3933

SA/NT  
TEL: (08) 8241 7111  
FAX: (08) 8241 7011

NZ  
TEL: (09) 447 1007  
FAX: (09) 447 1008